

INSTALLATION INSTRUCTIONS FOR

DYNOMAX AXLE-BACK PIPE KIT: 39537



2701 N. Dettman Rd.
Jackson, MI 49201


2019-2018 Jeep Wrangler JL,
Wrangler Unlimited JL 2.0L Turbo, 3.6L V6

DANGER WARNING: Should the purchaser decide to install any exhaust product at home, be warned that passenger car or light duty truck/van bumper jacks are intended for emergency use only. The use of frame contact jack stands, in conjunction with a floor jack as main support, is highly recommended to minimize accidental dropping of a vehicle during the installation process.

NOTE: Please read all instructions before beginning the installation.

1. Remove the O.E. muffler assembly from behind the OE intermediate pipe. Lubricate the rubber isolators with WD-40, or a similar product, to aid in removal of the rod hangers.
2. Install DynoMax tail pipe **73018**. Slightly tighten the 2 ½" clamp that connects this pipe to the outlet of the OE intermediate pipe. Insert the rod hanger.
3. Align the pipe and fully tighten the clamp.

39537 SYSTEM DIAGRAM

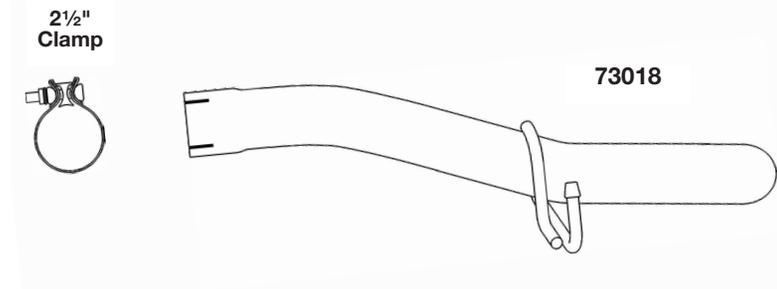

KIT CONTAINS:

- (1) 73018 pipe
- (1) 36438 band clamp
- (1) Dynomax sticker
- (1) Instruction sheet